

## Replacing the gaskets by front- and side glass

Product code 51224 contains: A complete set of gaskets for front- and side glass.

The following tools are needed: Flat nose pliers or similar tool

An allen key

A pair of scissors

Tool to mount the bauart spring, buy [here](#).

### How to replace the gasket by the front glass step by step:

- Open the door.
- Dismount the [bauart](#) spring with a pair of pliers or the special tool.
- Remove the two pins which hold the door and take the door out. If the pins are blocked, remove the safety rings using the flat pliers.
- Lay the door face down on a soft material to protect the paint.
- Dismount the small spring by the bottom of the handle.
- Dismount the lists at the top and bottom which hold the glass in place. After a period of exposure to heat, it might be necessary to use some rust-dissolving oil to loosen the screws.
- Remove the glass and the glass gaskets.
- Clean all surfaces from soot and glue residue.
- Mount the new gaskets and cut away any excess gasket.
- Place the glass on the new gaskets. It is important to mount the gasket in a way that leaves no leaks around the glass.
- Remount the lists at the top and bottom which hold the glass in place. Avoid any direct contact between the steel parts and the glass.
- Remount the small spring by the handle.
- Position the door in place and mount the two pins (and the safety rings) in the hinges.
- Remount the bauart spring. However, this is only mandatory in Germany.

Hereafter you can use your stove again.

**How to replace the gasket by the side glass step by step:**

- Open the door.
- Dismount the [bauart](#) spring with a pair of pliers or the special tool.
- Carefully remove the cast iron grid and the insulation parts.
- Remove the two nuts on the metal plate at the top of the glass in question and remove the plate and the two spacers.
- Loosen the two nuts behind the plate.
- Remove the clips holding the glass in place at the bottom. It may be necessary to use some oil to loosen up the rust.
- Remove the glass and the gaskets.
- Clean all surfaces from soot and glue residue.
- Mount the new gaskets and remount the glass. It is important to mount the gasket in a way that leaves no leaks around the glass.
- Repeat point 3-6 in reversed order.
- Remount the bauart spring. However, this is only mandatory in Germany.

Hereafter you can use your stove again.