

Replacing the glass gasket

Product code 51296 contains:	4 pcs of fiberglass gasket
The following tools are needed:	Flat nose pliers
	An allen key
	Tool to mount the bauart spring, buy here .

How to change the glass gaskets step by step:

- Open the door.
- Dismount the [bauart](#) spring with a pair of pliers or the special tool.
- Remove the two pins which hold the door and dismount the door. If the pins are secured, remove the safety rings by using the pliers.
- Place the door face down on a soft material to protect the paint.
- Remove the clips holding the glass in place. After a period of exposure to heat it might be necessary to use some rust-dissolving oil to loosen the screws.
- Remove the glass and the glass gaskets.
- Clean all surfaces from soot and glue residue.
- Mount the new gaskets on the door and place the glass on the gasket. It is important to mount the gasket in a way so that there are no leaks around the glass.
- Remount the clips holding the glass in place. Avoid direct contact between steel parts and the glass.
- Position the door in place and mount the two pins (and the safety rings) in the hinges.
- Remount the bauart spring. However, this is only mandatory in Germany.

Hereafter you can use your stove again.